



Appearance may vary depending on model.



Quick Start Guide Using Your High Efficiency Dryer

1 CLEAN THE LINT SCREEN



2 LOAD THE DRYER



3 PRESS POWER TO TURN ON THE DRYER



4 SELECT THE DESIRED CYCLE FOR YOUR LOAD*



5 ADJUST CYCLE SETTINGS, IF DESIRED*



6 SELECT ANY ADDITIONAL OPTIONS*



ECOBOOST™ OPTION

Activate the EcoBoost™ option to increase your energy savings. This option uses a slightly lower heat level and extends cycle time.



Turn on for optimal energy savings. Turn off for optimal cycle times. EcoBoost™ option is only available for NORMAL.

NOTE: Energy savings may vary across loads.

7 TOUCH AND HOLD START/PAUSE TO BEGIN CYCLE



Hold to Start

* **NOTE:** See "Cycle Guide" in the Use and Care Guide for more information about cycles, settings, and options. Not all cycles, settings, and options are available with all models. Read your Use and Care Guide before using your dryer.

W10804668A
W10804669A - SP

©/™ ©2015 Whirlpool. All rights reserved. Used under license in Canada.

06/15
Printed in U.S.A.