



# Construction Stormwater Spill Plan and Action Guidance

---

## First and Foremost:

- A plan must be in place to address any materials that have the potential to spill at your site.
- Any spill must be contained immediately, cleaned up, and disposed of properly.

## Primary Considerations for Your Spill Response Plan:

- ✓ Make it clear to all who is your qualified individual in charge of spill prevention and cleanup.
- ✓ Clearly mark and educate personnel on location of cleanup equipment.
- ✓ Store cleanup equipment close to potential hazards and materials with potential to spill.
- ✓ Make sure your Spill Response Plan has clear prevention and containment measures.
- ✓ Post notification and reporting procedures.
- ✓ Determine how employees and subcontractors will be trained to spill procedures.
- ✓ Dispose of all post-cleanup waste properly.
- ✓ Ensure a follow-up investigation occurs.

## Fort Carson Specifics:

### For any spill of 5 gallons or more:

**The spill must be reported to 911, let them know you are on Fort Carson;**

### For any spill less than 5 gallons:

**The spill must be reported to the Spill Coordinator at: 719.526.0973**

**BUT**

**Take the steps on the following page first!**


## POL SPILLS

*(HAZARDOUS MATERIALS NEXT PAGE)*

**Step 1.** If possible without endangering personnel health and safety, stop the product flow and prevent any further POL spillage.

**Step 2.** If it can be safely done, use onsite spill response materials to minimize or prevent the spill from entering a storm drain or storm ditch.

**Step 3.** If appropriate for the spill in this order, using good judgment, follow the flowchart below:

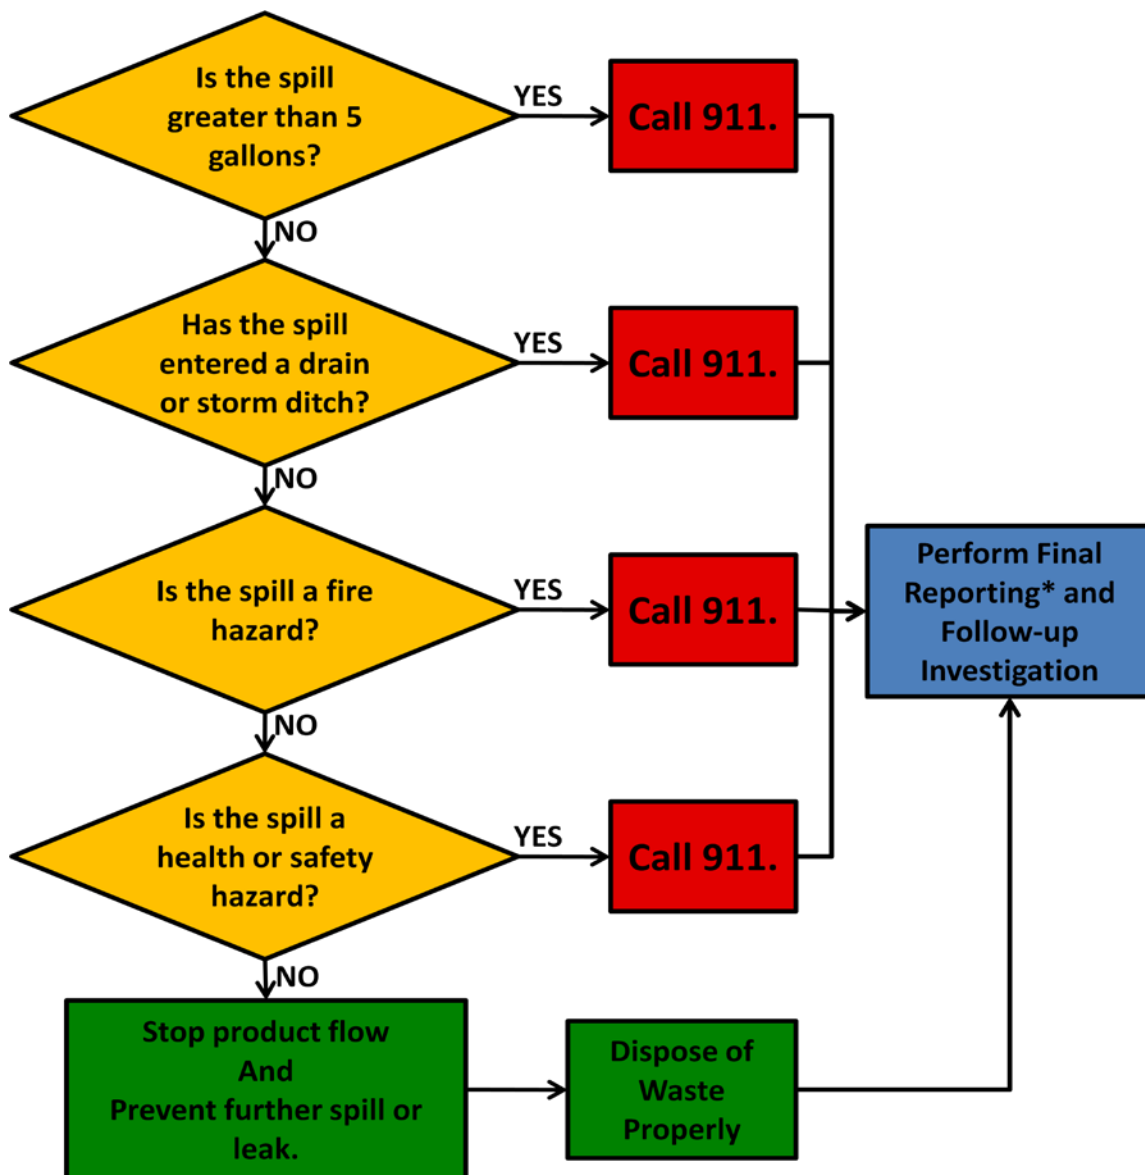

*\*Includes FC Form 1200-E Fort Carson Spill Report (attached)*


# HAZARDOUS MATERIALS SPILLS

*(POL SPILLS PREVIOUS PAGE)*

**Step 1.** If possible without endangering personnel health and safety, stop the product flow and prevent any further POL spillage.

**Step 2.** If it can be safely done, use onsite spill response materials to minimize or prevent the spill from entering a storm drain or storm ditch.

**Step 3.** If appropriate for the spill in this order, using good judgment, follow the flowchart below:

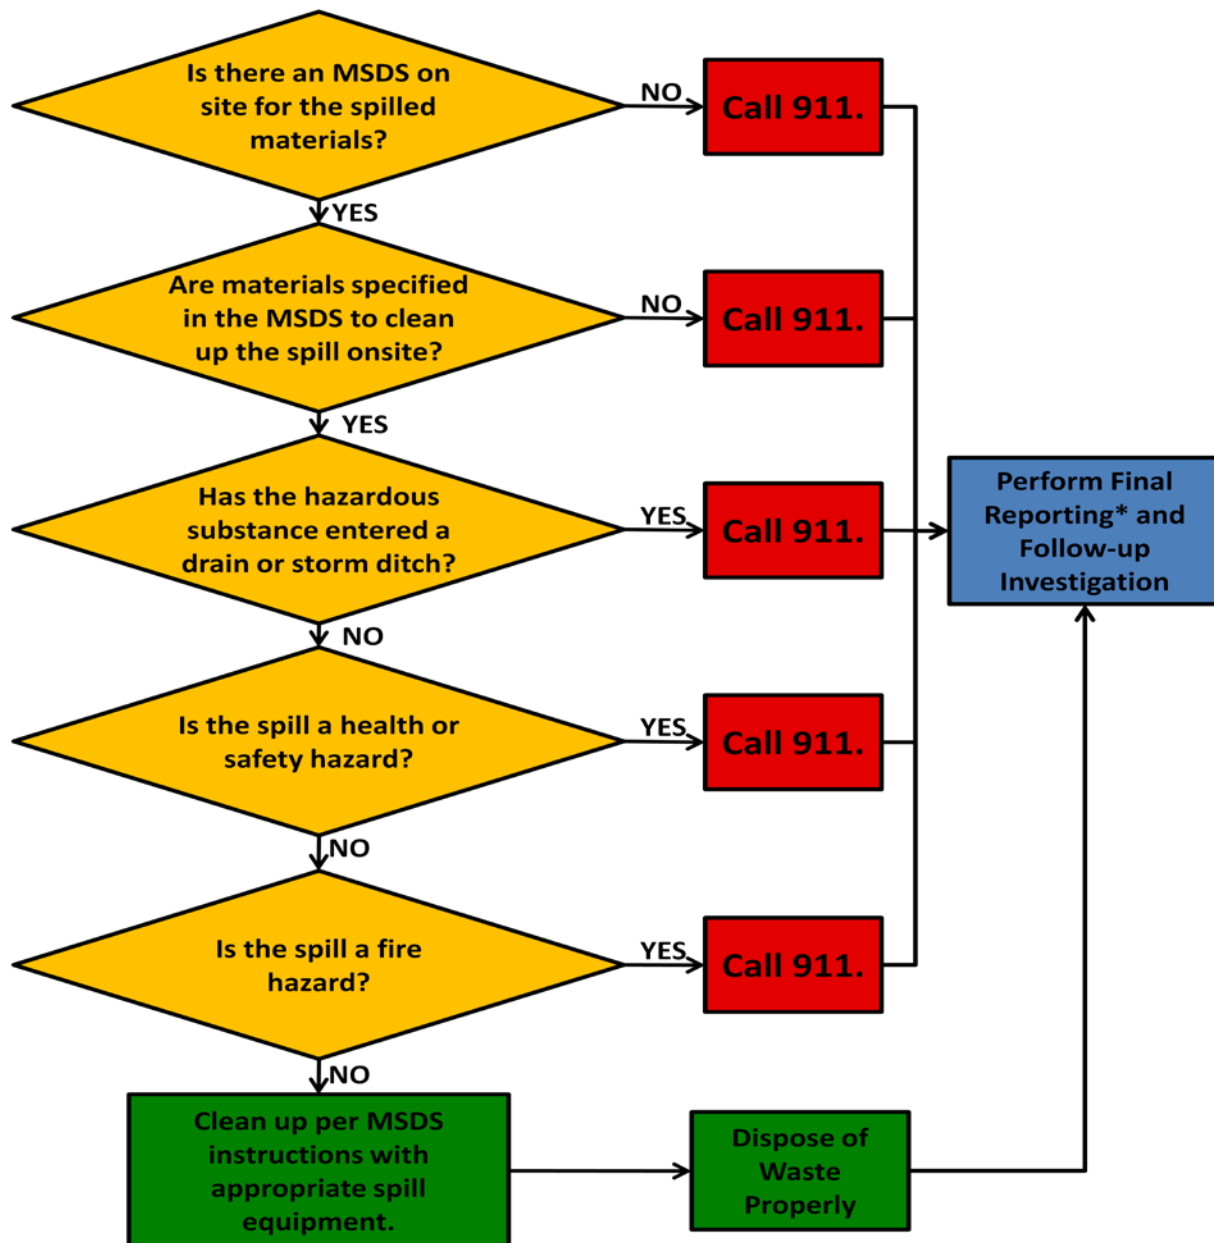

*\*Includes FC Form 1200-E Fort Carson Spill Report (attached).*

**FORT CARSON SPILL REPORT**  
*(DPW is the proponent; the approving authority is FC REG 350-10)*

DATE: \_\_\_\_\_

UNIT:	POC:	PHONE:
-------	------	--------

1. Complete the questions below and e-mail this form and any additional documentation (e.g., SDS, pictures) to: [usarmy.carson.imcom-central.list.dpw-ed-spill-response@mail.mil](mailto:usarmy.carson.imcom-central.list.dpw-ed-spill-response@mail.mil).

a. Name, unit/organization, and phone number of person discovering spill: \_\_\_\_\_

b. Date and time the spill occurred: \_\_\_\_\_

c. Did the spill occur because materials were wrongfully discharged or abandoned?    YES    NO

d. Location of spill: \_\_\_\_\_

e. Type of material spilled: \_\_\_\_\_

f. Estimated quantity of material spilled (gallons): \_\_\_\_\_

NOTE: In accordance with FC REG 200-1, all spills of more than five gallons or covering more than 100 square feet and/or any amount entering a drain or ditch must be reported to the Fort Carson Fire and Emergency Services at 911. Make further notification by calling the DPW, Spill Line at (719) 526-0973.

g. Was the spill reported to the Fort Carson Fire and Emergency Services?    YES    NO

h. Cause of spill: \_\_\_\_\_

i. Affected resources or facilities: \_\_\_\_\_

j. Did any spilled materials enter any drains or ditch?    YES    NO

k. Estimated quantity and type of contaminated soil, dry sweep and/or other clean-up materials:  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

l. Description of clean-up or other remedial action taken:  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

2. The POC for this report and clearance is: \_\_\_\_\_ PHONE: \_\_\_\_\_

COMMENTS:  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_